Recommended Lighting Practices

A Collaborative Effort To Preserve West Texas' Dark Night Skies



McDonald ObservatoryFort Davis, Texas



Located atop Mount Locke and Mount Fowlkes in Fort Davis, Texas and under some of the darkest night skies in the continental United States, sits the 500-acre world-renowned University of Texas at Austin's McDonald Observatory. The Observatory's mission is to inform, educate, and inspire through their public programs, and support the teaching of the science and hobby of astronomy.

Through a campaign of education and awareness, the McDonald Observatory's **Dark Skies Initiative** seeks to protect the beautiful, Milky Way-filled night skies of West Texas for ongoing astronomical research and education.

The following **Recommended Lighting Practices** are a result of collaboration between several partner organizations. These organizations strongly support the McDonald Observatory's mission.

The recommendations in this document are designed for oil and gas operations in the following Texas counties that have lighting ordinances: Brewster, Culberson, Hudspeth, Jeff Davis, Pecos, Presidio, and Reeves. While these counties surround the McDonald Observatory, the recommendations are equally beneficial across the industry.

The McDonald Observatory and all of our partners thank you for following the Recommended Lighting Practices and for helping to keep the night skies of West Texas dark.

Partners















Mill Com

Mike Sommers
American Petroleum
Institute
President and CEO

Edwin fongared

Ed Longanecker
Texas Independent
Producers and Royalty
Owners Association
President

Bill When

Bill Wren McDonald Observatory Special Assistant to the Superintendent

Trou Dapen

Todd Staples
Texas Oil & Gas
Association
President

Bow Shyperd

Ben ShepperdPermian Basin Petroleum
Association
President

Mark Houser

Mark Houser University Lands CEO Joni B. Carwell

Joni Carswell Texan by Nature CEO and President



Table of Contents

1.	Prepare a Lighting Plan	4
2.	Use Audiovisual Warning System (AVWS) Technology for Hazard Lighting on Structures Taller than 200 feet	. 5
3.	Use Full Cutoff Luminaires	5
4.	Direct Lights Properly to Eliminate Light Spill and Trespass	6
5.	Use Amber Instead of Bluish-White Lighting	. 7
6.	Minimize Lighting Usage During Construction and Operations	. 8
7.	Use Vehicle-Mounted Lights or Portable LightTowers for Nighttime Maintenance Activities	. 9
8.	Options if the Need to Flare Arises	10

Much of the language herein was adopted from a Bureau of Land Management Document, "Best Management Practices for Reducing Visual Impacts of Renewable Energy Facilities on BLM-Administered Lands" (BLM/WY/PL-13/013+1340). Pictured above: Apache Corporation Tank Battery with dark skies friendly lighting installed.

1. Prepare a Lighting Plan

Project Phase: Siting and Design

It is recommended that a lighting plan be prepared documenting how lighting will be designed and installed to minimize night-sky impacts and impacts on nocturnal wildlife during construction and operations. The lighting plan should specify the following:

Number of lights and lumen output of each

Minimum number of lights and the lowest luminosity consistent with safe and secure operation of the facility;

2. Alternatives to lighting

Retro-reflective or luminescent markers in lieu of permanent lighting where feasible;

3. Fixture design

Lights of the proper design, shielded to eliminate up-light, placed and directed to eliminate light spill and trespass to offsite locations:

4. Lamp color temperature

Lights of the proper color to minimize night-sky impacts;

5. Standard operating procedures

Minimization of unnecessary lighting use through alternatives to permanent lighting, such as restricting lighting usage to certain time periods;

- Any activities that may be restricted to avoid night-sky impacts;
- A process for promptly addressing and mitigating complaints about potential lighting impacts.

Limitations: Safety and security must be considered in developing a lighting plan for facilities and access roads. The FAA, OSHA, and other agencies may have regulations governing lighting practices that must be considered in designing facility lighting.

2. Use Audiovisual Warning System (AVWS) Technology for Hazard Lighting on Structures Taller than 200 feet

Project Phase: Siting and Design


If the FAA approves AVWS technology for general use, it should be used for structures exceeding 200 feet in height. If the FAA denies a permit for use of this technology, the project developer should limit the amount of lighting to the minimum required by the FAA, in order to minimize visibility beyond that required to meet safety requirements.

3. Use Full Cutoff Luminaires

Project Phase: Siting and Design

Except as required to meet the minimum safety and security requirements (e.g., collision markers required by the FAA, or other emergency lighting triggered by alarms), it is recommended that all permanent lighting use full cutoff luminaires, which are fully shielded (i.e., not emitting direct or indirect light above an imaginary horizontal plane passing through the lowest part of the light source).

It is also recommended that all permanent lighting meet the Illuminating Engineering Society (IES) glare requirement limiting intensity of light from the luminaire in the region between 80° and 90° from the ground. It is further recommended that all fixtures be mounted properly, at the proper angle.

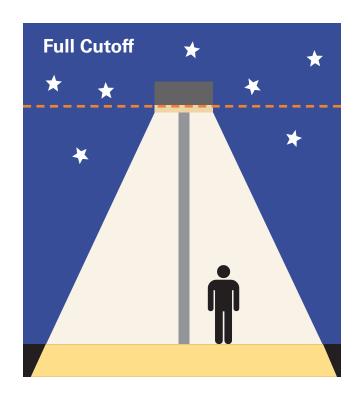

4. Direct Lights Properly to Eliminate Light Spill and Trespass

Project Phase: Siting and Design, Construction

Construction and permanent lighting should be mounted and directed to focus light only on the intended area, and to avoid light spill and offsite light trespass. Lights pointing upward or horizontally should be avoided.

Limitations: Safety or functional considerations may dictate lighting practices that result in some light spill or light trespass.

Before & After — Triple Crown Gas Plant



Wittenbach/Wren Cimarex/Chevron/McDonald Observatory

5. Use Amber Instead of Bluish-White Lighting

Project Phase: Siting and Design

When accurate color rendition is not required (e.g., roadway, basic security), it is recommended that lighting be amber in color, using either low-pressure sodium lamps or yellow LED lighting, or an equivalent, with LED lighting being preferred over sodium.

When white light is required for accurate color rendition, it should be less than or equal to 3500°, and preferably below 3000° Kelvin color temperature (warm-white). Bluish-white lighting should not be used in permanent outdoor lighting.

Limitations: Safety and security must be considered in designing and using lighting, including the coloring of that lighting. Further of note, lighting that is amber or warm-white in color sometimes requires a special order from lighting manufacturers.











6. Minimize Lighting Usage During Construction and Operations

Project Phase: Construction, Operations

Consistent with safety requirements, lighting use should be minimized during construction and operations.

During construction, localized and portable lighting should be used where and when the work is occurring. Lighting should be powered by generators or electrical distribution when available and have switches to cut power when lighting is not required during construction.

Lighting for facilities should not exceed the minimum number, intensity, and coverage required for safety and basic security. All area lighting should be divided into separately controlled zones to focus lighting on smaller areas where tasks are being performed and to avoid illuminating unused space.

Area lighting should be controlled by timers, sensors, or switches available to facility operators; dusk-to-dawn lighting controlled by photocell alone should not be allowed except where required for safety. The facility operators should identify those components/ structures that do not require continuous lighting for safety reasons.

Area lights should only be switched on when there is a specific need (e.g., persons occupying an area, or alarm situation). When not needed, lights should be switched off. Exceptions to switched-off lighting for safety purposes should be articulated in the lighting plan.

Focused task lighting, portable light towers, or flashlights should be used instead of area lighting, and retro-reflective or luminescent markers should be used in lieu of permanent lighting where feasible.


Limitations: Safety and security must be considered in designing and using lighting. The FAA, OSHA, and other agencies may have regulations governing lighting practices that must be considered in designing facility lighting and regulating lighting usage.

7. Use Vehicle-Mounted Lights or Portable Light Towers for Nighttime Maintenance Activities

Project Phase: Operations

Vehicle-mounted lights or portable light towers are preferred over permanently mounted lighting for nighttime maintenance activities. If possible, such lighting should be equipped with hoods or louvers and be aimed toward the ground to avoid causing glare and sky glow.

Portable Light Towers — Mount High, Aim Low

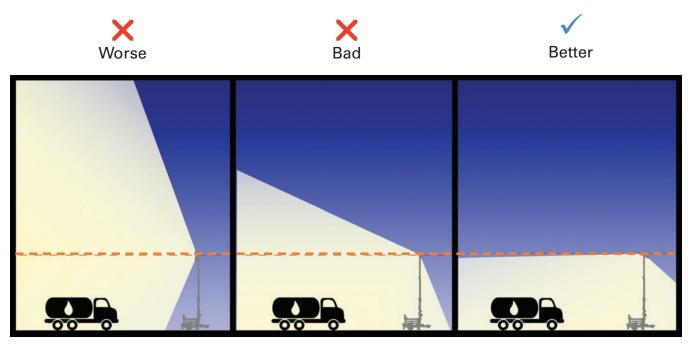

Wren/McDonald Observatory

Limitations: Use of vehicle lighting must be consistent with safety requirements. Some maintenance activities may have lighting requirements that make vehicle-mounted lighting impractical.

8. Options if the Need to Flare Arises

Project Phase: Operations

Limiting light emitted by flaring is an element that could have a significant positive impact on fugitive lighting, and have a fairly minor commercial impact on operations. Thus, it is recommended that locations with a continuous or near-continuous flare consider utilizing an enclosed combustor or similar technology rather than an open flare, where technically and commercially viable. While the top of an enclosed combustor is open, the light emitted from a combustor versus an open flare is dramatically less.

Limitations: Safety and security must be considered in designing and using an enclosed combustor. The EPA, Railroad Commission of Texas and other agencies may have regulations governing practices that must be considered in utilizing an enclosed combustor.

Example of enclosed combustor

